



CISSELL FORM FINISHING BAG

REPLACING A WORN FORM FINISHING BAG

1) REMOVE

Remove worn bag and replace with a new Cissell Form Finishing Bag.

2) REPLACE

Drape new cover over the Form. There are 3 cords located on the bottom of the cover. Each has a separate cord lock. Pull bottom of bag over base of unit and tuck any excess portion of the cover under. Tighten the cord which is around the base of the unit.

3) READY

After tightening the draw cord with cord lock you are ready to use the Cissell Form Finishing Bag.

PLEASE NOTE:

1) There are three cords with cord locks on one side of the Cissell Form Finishing Cover. These cords can be adjusted to better accommodate the garment being finished. Loosen or tighten the cords to fit the shape and size of the garment on the form.

2) Zippers below shoulder can be opened to allow steam to blow into sleeves if necessary.

3) This Form Finishing Bag can be used on multiple Cissell, Adjusta-Form, Huebsh/Glover, or Paris models.

