 


BOSTITCH®

B8® Impulse™ 45 Electric Desktop Stapler

Model B8E-VALUE
UPC 0 77914 02953 3

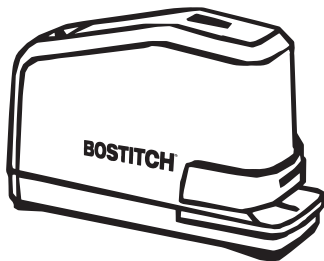

Congratulations on your purchase of this premium quality Electric Stapler. With proper use and care, this stapler will serve you well for many years

 


IMPORTANT:

Please read these instructions completely and carefully before operating your new electric stapler. Keep this instruction sheet for future reference.

Features:

- Low staples supply indicator light to let you know when it is time to reload staples
- Super-sensitive optical trip for sure fire accuracy
- High impact plastic housing
- East push-button staple loading
- Loads a full strip of 210 B8 staples. (STCRP2115 1/4 or STCR2115 3/8)
- Maximum capacity 45 sheets of 30 lb. bond paper

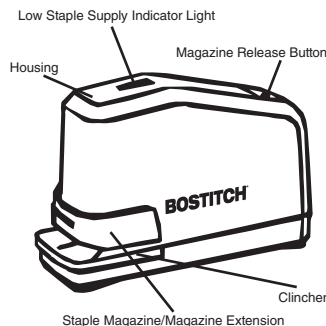

Specifications:

- Operating Voltage - 120V AC 60 Hz
- Operating Current - 3.0 AMPS
- Staple Size - B8 1/4", B8 3/8"
- Magazine Capacity - 220 Staples
- Stapling Capacity - 2 to 45 sheets of 20 lb. bond paper
- Maximum Stapling Speed - 1 per second
- Operation stapling rate - 20 staples per minute, operation continuity after 30 minutes shall have 10 minutes rest, but not recommended for daily continuous use in a manufacturing or production environment.
- Dimensions - 3"W x 5.82"H x 8.504"L
- Weight - 2.341lb. 37.4oz.
- Throat Depth - 3/8"

Important Note Before Beginning:

This unit is to be used on 120v AC outlets only. Always unplug your stapler before cleaning or attempting to clear a staple jam. The stapling capacity has been designed to staple a maximum of 45 sheets of standard bond paper.

The optical sensor firing mechanism may not actuate when in direct sunlight.

Low Staple Supply Indicator Light:

This stapler is designed to indicate when staple supply is low. (A blue light will come on at the top of the stapler and will remain on until staples are inserted and magazine is closed)

Low Staple Supply Indicator Light



General Safety Precautions for Electric Stapler

- Do not operate electric stapler with a damaged cord or plug, after stapler malfunctions, or has been damaged in any manner.
- Unplug unit from outlet before cleaning or removing a staple jam. Grasp plug, not the cord, when disconnecting stapler from outlet.
- Do not allow electrical components to get wet.
- Keep fingers, hair, jewelry, and foreign objects, etc. away from stapler opening.
- Do not disassemble the stapler. Should your stapler require servicing at any time, refer to warranty.
- This stapler is not intended for heavy commercial use. Do not use the stapler for stapling hard materials like cardboard or heavy plastic.
- Please follow the safety precautions for operation. Circumstances against safety precautions might affect stapling function.

Do not operate stapler without inserting paper, and refrain from double stapling (stapling over a staple).

Stapling

 
1. Insert paper directly under magazine.
2. Be sure to cover staple clincher.
3. When stapling 2-20 sheets of paper, use enter STCR2115 3/8 or STCR2115 1/4.
4. When stapling 20-45 sheets of paper, STCR2115 3/8 only.



How to Load Staples

For best performance use Bostitch staples, model STCRP2115 1/4 or STCR2115 3/8

1. Press the magazine release button. The magazine extension will eject outward.
NOTE: DO NOT press release button with your face directly in front of the stapler. It may result in injury.

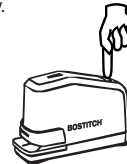

2. Grasp the magazine extension and pull forward to ensure a full strip of staples can be inserted. CAUTION: There may be staples in magazine. Be sure they are in position before adding new strip of staples. Make sure staple strip is correctly inserted and properly seated before closing.



3. Push the magazine back into the housing until it is firmly locked in position.
NOTE: To prevent damage to the driver element the magazine must be completely pushed back and locked before stapling.



If Stapler Jams

All staplers can jam from time to time. To clear a jam, follow these four easy steps:

1. Remove AC plug from the outlet before removing jammed staples.
2. Press magazine release button. Magazine should eject.
3. If staple magazine does not eject, check to ensure driving element is not down in magazine. If so, use pen or similar object to disengage the driving element from magazine.
4. Press magazine release button. Magazine should now eject.



7 Year Limited Warranty U.S.A. and Canada Only

Effective December 1, 2005 Bostitch® warrants to the original retail purchaser that the product purchased is free from defects in material and workmanship, and agrees to repair or replace, at Bostitch® branded office product (7) years from date of purchase. Warranty is not transferable. Proof of purchase date required. This warranty covers only damage resulting from defects in material or workmanship; it does not cover conditions or malfunctions resulting from normal wear, neglect, abuse, accident or repairs attempted or made by other than our national repair center or authorized warranty service centers. Driver blades, sharpener cutters, punch heads, and cutting discs are considered normally wearing parts. You are responsible for the costs of shipping the defective product to Bostitch® or its designated repair center. For optimal performance of your Bostitch® products, always use genuine Bostitch® staples and replacement parts.

THIS WARRANTY IS THE EXCLUSIVE WARRANTY OF BOSTITCH® AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. BOSTITCH® SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country.

For information on our warranty claim procedure please email us at www.BostitchOffice.com or contact us at 1-800-343-9329

CAUTION

This power supply cord is used as the main disconnect device, ensure that the socket-outlet is located/ installed near the equipment and is easily accessible.

USA & Canada: Manufactured under license by: Amax Incorporated, East Greenwich, RI 02818 800.343.9329 Made in Taiwan

Mexico: Importado Por: Black And Decker S.A. de C.V. Antonia Dovali Jaime #70 Torre B Piso 9, Col. Santa Fe, Delegacion Alvaro Obregon, Mexico D.F. 01210 Tel(52) 55 53267100 R.F.C.BDEB106261W7 Hecho En Taiwan Contenido 2 plazas

Bostitch® and the Bostitch® logo are registered trademarks of Stanley, Black & Decker, Inc. or one of its affiliates, and are used under license.

Bostitch® y el logotipo de Bostitch® son marcas comerciales registradas de Stanley, Black & Decker Inc., o de una sus filiales, y so usan bajo licencia.

BostitchMD et le logo BostitchMD sont des marques déposées de Stanley Black & Decker Inc. ou d'une de ses filiales et est utilisé sous licence.

Benchmarks/Evaluaciones comparativas/ Repères ; * Bostitch® MINISUITE-BLK