



PIPE INSULATION SIZING

REMEMBER:

When ordering the correct size insulation, measure across the opening of the insulation you are replacing. After getting the diameter of the insulation, deduct about $\frac{1}{4}$ " for the proper size to order.

Thus, if the opening measures $\frac{3}{4}$ " across, if you deduct $\frac{1}{4}$ " - the insulation would be called a $\frac{1}{2}$ ".

You can also measure around the pipe you are covering to get the circumference and select the correct sized insulation.

True Size Chart Below.



NAME/SIZE	$\frac{1}{2}$ "	$\frac{3}{4}$ "	1"	$1\frac{1}{4}$ "	$1\frac{1}{2}$ "	2"
TRUE DIAMETER OF INSULATION / OUTSIDE DIAMETER OF PIPE	.84"	1.05"	1.315"	1.66"	1.9"	2.375"
CIRCUMFERENCE OF PIPE	2.64"	3.29"	4.11"	5.21"	5.96"	7.44"